


SUPERAGENT 2.0 INSTALLATION

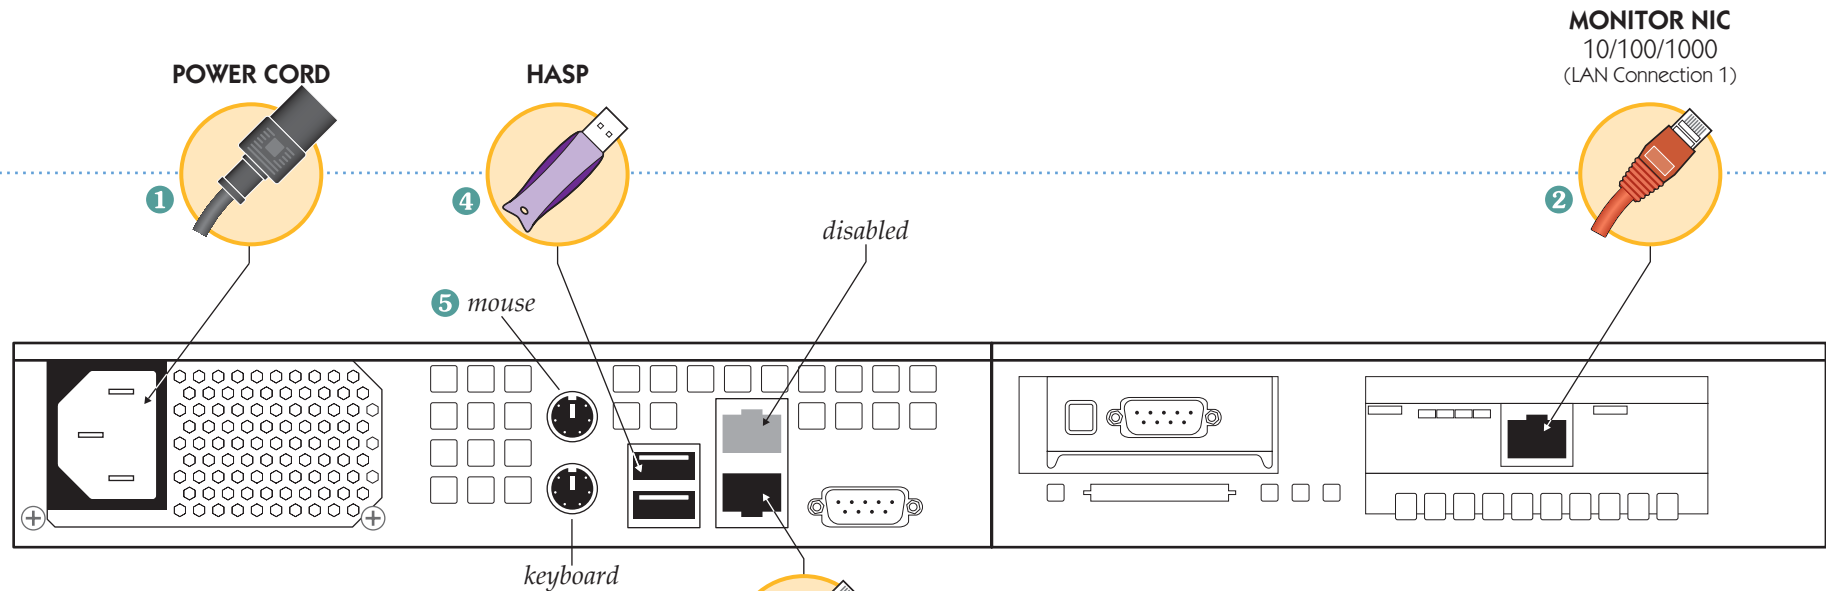

- 1 Plug in power cord
- 2 Insert cable into Monitor NIC (LAN Connection 1)
- 3 Insert cable into Management NIC (LAN Connection 2)
- 4 Insert HASP (software key) into either upper or lower USB port
- 5 Your configuration may require you to connect a mouse and keyboard

NOTE: The *Monitor NIC* collects network traffic from a spanned port.

The *Management NIC* provides access to the SuperAgent server (to set configurations, etc.) and allows remote viewing of the SuperAgent console.

